



# Flamco

## Practical tips

- When insulating air separators, the brass head must not be insulated.
- When filling the installation do **not** allow the air to escape through the floatvent.
- Before initial use of the installation, it must be thoroughly flushed and cleaned.
- When placing a floatvent, pay attention to the following:
  - that it is accessible during operation;
  - that it is possible check it is operating properly;
  - that the product remains removable at all times;
  - that in the case of a Flexair, Flamcovent or Flamcovent Clean, the minimum clearances in relation to walls/ceilings etc. must be observed.
- In the event of a leak from a Flamcovent, it can always be shut off. Take this into account when installing and check the operation during regular servicing.
- Before unscrewing the drain stop of the Flexair or Flamcovent, the pressure must be released from the installation. This also applies to loosening the brass float head.
- During regular servicing, we recommend that you clean the Flexvent floatvent.
- Contamination must be prevented/avoided at all times, as it impairs the operation of your appliance.

## Safety

Installations (such as central heating, cooling and drinking water installations) always work at a certain excess pressure relative to ambient pressure. Air separators are appurtenances, for which special safety regulations apply. The fitter comply with these regulations.

Work on an installation (under pressure) must always be carried out by a certified specialist.

The fitter, as a specialist, must point out these aspects to the user and to warn the user against improper or incorrect use. The entire installation must also be well maintained.

- Blowing off dirt/contamination which has collected at the bottom of a Flexair or Flamcovent, must be done when the installation is not under pressure. **Note:** The sediment, when discharged, may still be hot. **Please exercise due caution!**

Flamco b.v. accepts no responsibility for any damage or loss as a result of pollution, incorrect application or improper use or our products.

### Flamco UK Limited

Unit 4, St. Michael's Road  
Lea Green Industrial Estate  
St. Helens, Merseyside  
WA9 4WZ  
Tel.: +44 (0) 1744 818100  
info@flamco.co.uk