


Installation

Robinet		M22	
Tube			
Cu	834 	835 S 	835 
PER		835P 	
Multicouche		839 	

Adjustment principle of KV

The adjustment of the desired flow should be using the embedded tool that displays the 12 adjustment positions. Turn the tool with a screwdriver as shown in the diagram below. Place the number corresponding to the desired forfeit opposite the indentation on this hat.

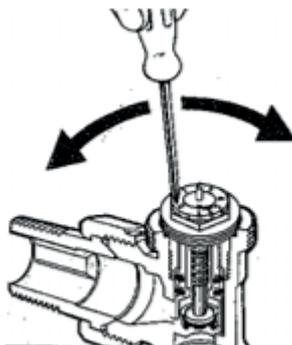

Sample setting in position 5

Nominal level setting



- Close the valve completely and mark it with one position.
- Open and count 6 marks. The valve is now open at nominal opening.
- To install thermostatic head, remove the plastic cap.
- Put the thermostatic head in position 5, firmly push the head on the faucet and screw in hand tight.