

Flamconnect G4 Remote



ENG Quickstart guide addendum




Flamconnect Remote Monitoring Flamconnect Remote Service

flamcogroup.com/manuals

26

Power up the gateway by plugging the power plug into the 230V wall socket.

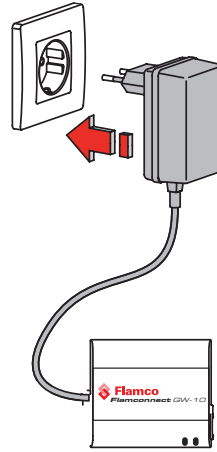


27

Register the gateway on the Flamconnect portal.

Register via:

<https://flamcogroup.com/registration-remote>

Or scan:

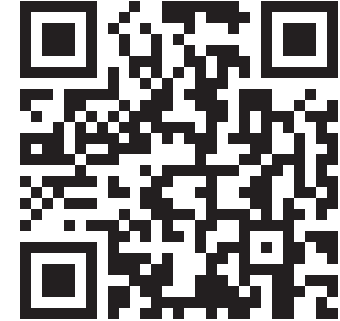

28

The connections are established when the power led (4) is solid orange and the user led (5) is solid green.

