

Manual de conectividad de Flextronic



- ESP** **Manual de conectividad**
Instrucciones de instalación y funcionamiento
- Puerta de enlace Flamconnect
 - Salidas analógicas
 - Salidas digitales (discretas)
 - Interfaz del sistema de gestión de edificios (BMS)





Indice

1. Uso correcto	2
2. Descripción del producto	2
2.1. Información acerca del cableado	3
2.2. Puerta de enlace Flamconnect.....	3
2.3. Conectividad de BMS mediante Modbus y Bacnet	4
2.4. Interconexión de dispositivos automatizados Flamco	4
2.5. Señales de salida analógicas (cliente).....	4
2.6. Señales de salida digitales (discretas).....	5
3. Configuración y ajustes inalámbricos	5
3.1. Configuración de la interfaz de comunicación.....	6
3.2. Programación de las salidas digitales (discretas)	6
4. Tabla de asignación de Modbus	7
4.1 Flamcomat.....	7
4.2 FlexFiller	9
5. Tabla de asignación de Bacnet	12
5.1 Flamcomat.....	12
5.2 FlexFiller	14

Este documento es un suplemento a las instrucciones de instalación y funcionamiento del producto. Estas instrucciones se aplican específicamente a Flamcomat G4, en lo referente a la seguridad, el uso y el funcionamiento.

Si necesita instrucciones de instalación u otra documentación, disponible en varios idiomas, visite la siguiente página web: www.flamcogroup.com/manuals. Puede obtener información adicional sobre los productos en la sucursal de Flamco correspondiente.

Leyenda:

-  Inicio
-  Ajustes
-  General
-  Información del servicio

1. Uso correcto

La unidad de control Flextronic debe utilizarse de acuerdo con las instrucciones de este manual. La declaración de conformidad que figura en la documentación original sigue siendo válida.

2. Descripción del producto


Flextronic es una unidad de control universal para dispositivos automatizados Flamco.

Cuenta con una amplia variedad de opciones de comunicación que se pueden activar en el menú de accesorios de Flextronic:

1. Puerto Ethernet para la integración de BMS, que se comunica mediante el protocolo Bacnet o Modbus.
2. Puerto USB para guardar el registro operativo o llevar a cabo una actualización de firmware.
3. Puertos CANbus (emparejados para cadena margarita) para la interconexión de múltiples dispositivos automatizados Flamco.
4. Puertos RS-485 (emparejados para cadena margarita) para la conexión de la puerta de enlace de servicio remoto de Flamco (Flamconnect) o para la integración de BMS mediante Modbus o Bacnet.
5. Interfaz inalámbrica (2400-2485 GHz) para emparejar con un smartphone o una tablet.
6. Señales de salida de tensión analógicas para la indicación remota del nivel del depósito y la presión del sistema (0-10 V).
7. Señales de salidas digitales (discretas) (250 V CA, 5 A máx., sin potencial). En el menú Alarmas de Flextronic, pueden configurarse advertencias y errores personalizados para los tres puertos.

Los puertos no indicados están destinados para accesorios de dispositivos automatizados específicos u otros fines operativos. No se deben utilizar para las comunicaciones o la interfaz del cliente.


2.1. Información acerca del cableado

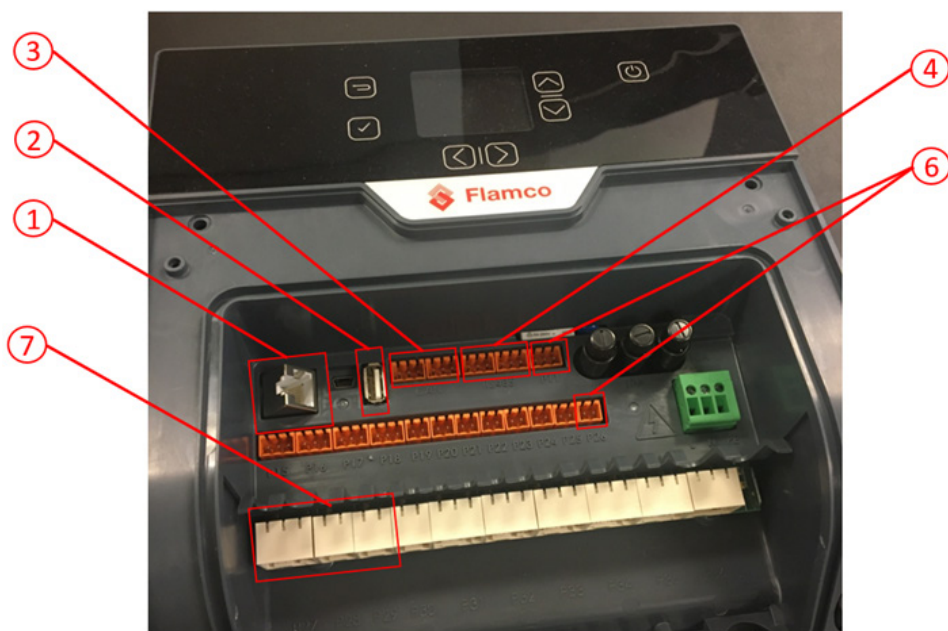


La instalación, el tratamiento de los datos y la puesta en marcha deberán realizarse por personal cualificado. Deberán respetarse la legislación, los reglamentos y las normas nacionales pertinentes. Si necesita instrucciones de instalación u otra documentación, disponible en varios idiomas, visite la siguiente página web: www.flamcogroup.com/manuals.

- Flamco no incluirá ni suministrará cables adicionales.
- Flamco recomienda el uso de un par trenzado blindado.
- La resistencia de terminación tiene un valor de 120 ohmios.
- La longitud máxima permitida de los cables es de 500 m.

2.2. Puerta de enlace Flamconnect

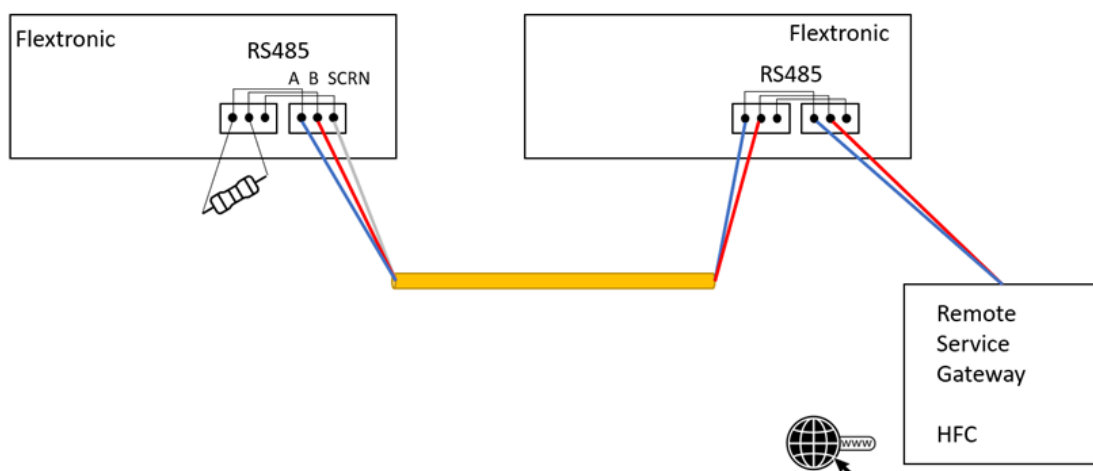


2.3. Conectividad de BMS mediante Modbus y Bacnet

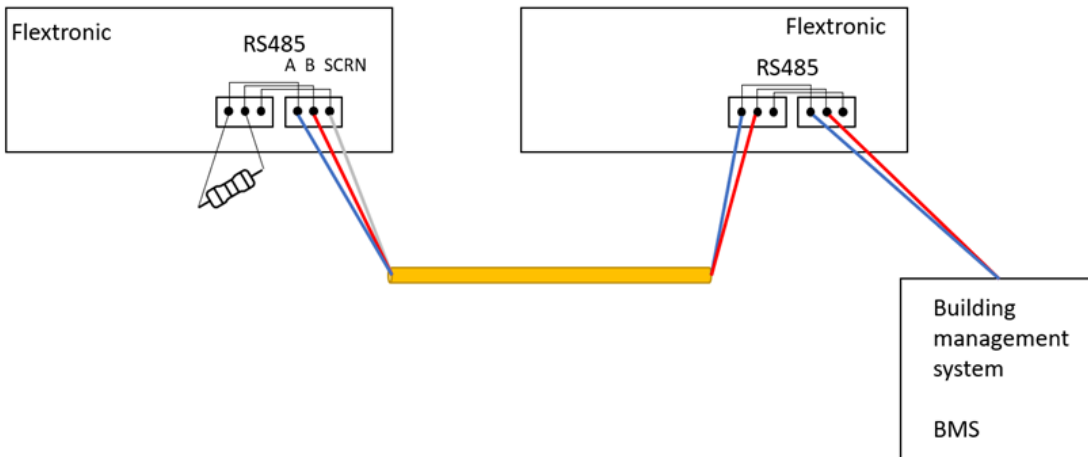

La comunicación mediante Modbus y Bacnet no es posible en el BUS RS-485 al mismo tiempo. Si se necesitan ambos protocolos, uno de ellos debe funcionar mediante conexión Ethernet (IP).


Al utilizar la puerta de enlace de servicio remoto Flamconnect, el puerto RS485 realiza esta función. Si también se requiere un protocolo Modbus o Bacnet, solo podrá realizarse mediante la conexión Ethernet (IP).

2.4. Interconexión de dispositivos automatizados Flamco

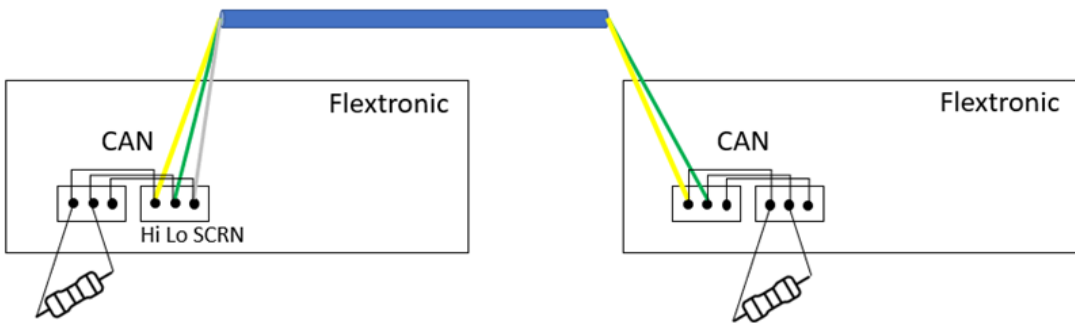

2.5. Señales de salida analógicas (cliente)





Se emplean para obtener la señal analógica de tensión relativa a la presión del sistema y el nivel del depósito.

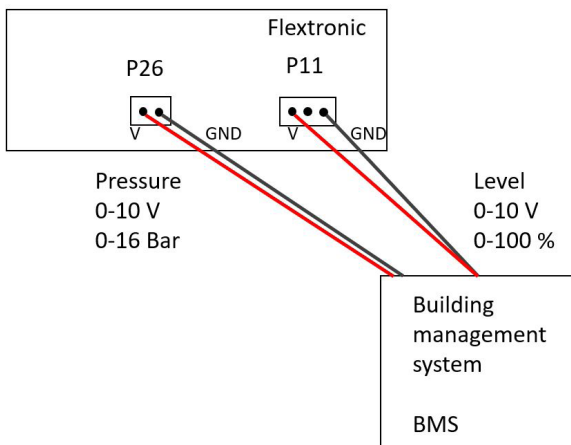

2.6. Señales de salida digitales (discretas)

GUI settings:
Invert polarity: off

Specifications of VFC:
5A @ 240VAC (non-inductive)

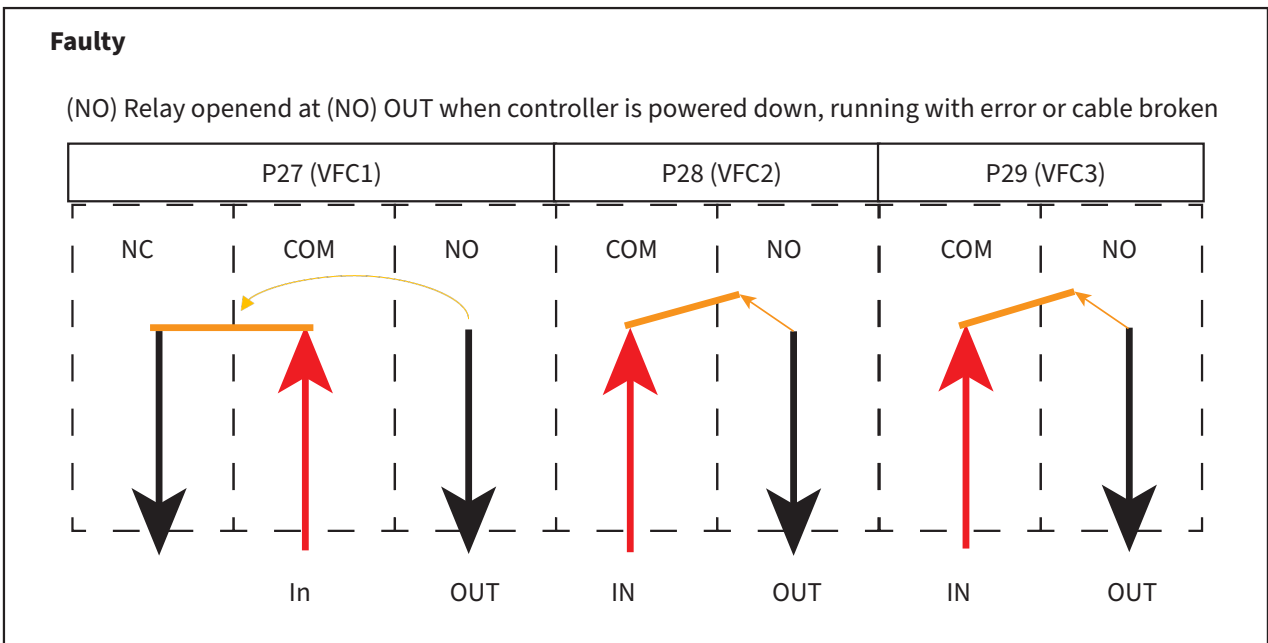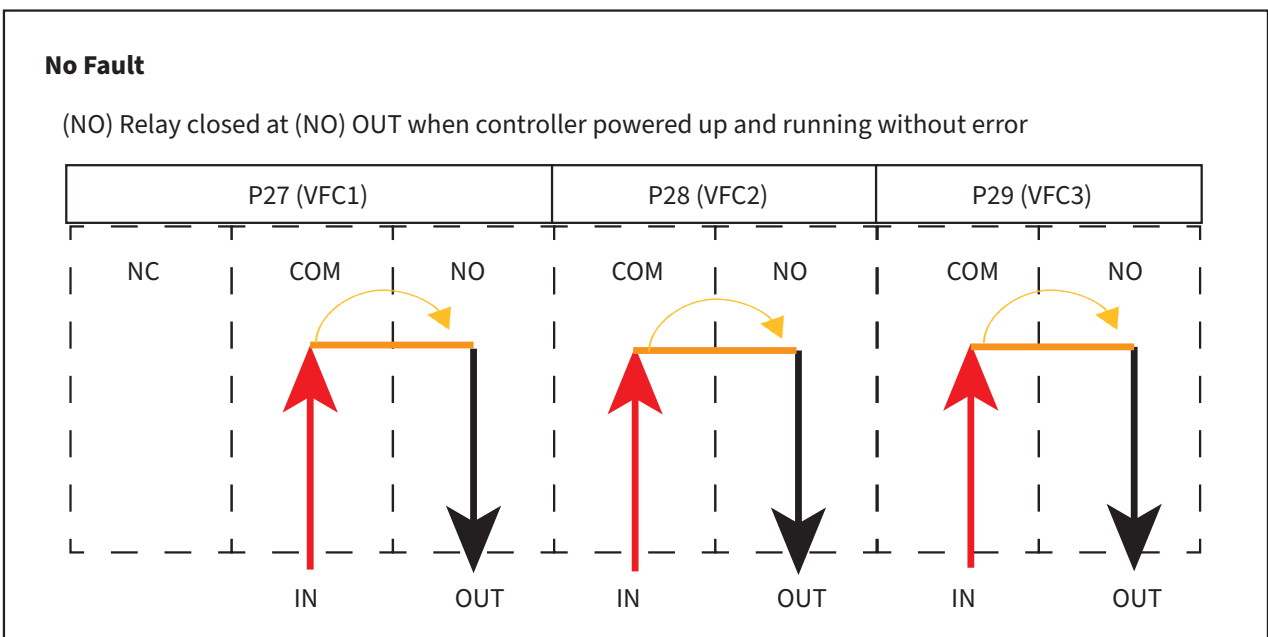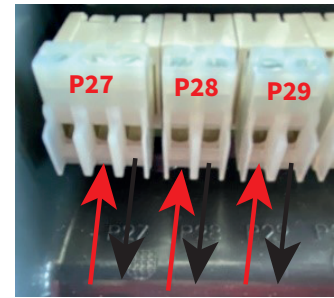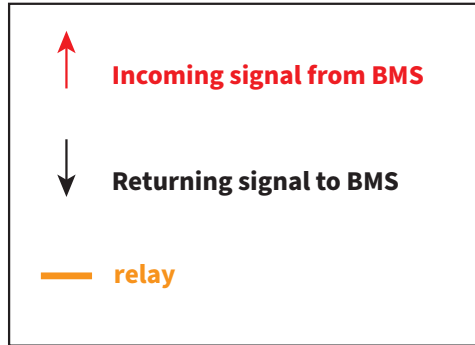

Se emplean para ver el estado del dispositivo automatizado. Se puede asignar un error personalizado a todas las salidas.



La salida P29 es una señal de enclavamiento de la caldera del modo >110 °C, y no está disponible para la alarma en este modo.

3. Configuración y ajustes inalámbricos



A través de la aplicación Flamconnect, se puede llevar a cabo la configuración.

Para llevar a cabo el emparejamiento, introduzca el código de acceso. Podrá encontrarlo en la etiqueta del código QR que figura en el dispositivo automatizado o se muestra en la pantalla.



	Información del sistema	Ver la información del controlador y el dispositivo automatizado	
---	-------------------------	--	---

La configuración de las interfaces del cliente y los protocolos de comunicación se puede realizar desde el menú del controlador.

	<p>Accesorios</p>	<p>Activar los accesorios avanzados del dispositivo automatizado</p>	
---	-------------------	--	---

3.1. Configuración de la interfaz de comunicación

Ethernet:

Dirección IP 192.168.100.150
Máscara IP 255.255.255.0
Puerta de enlace IP 192.168.100.1

RS-485:

Flextronic es un dispositivo esclavo.

ID del dispositivo seleccionable
Velocidad en baudios 19 200
Paridad 8-n-1


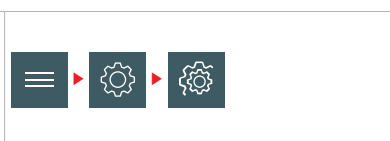


Solo se puede asignar un protocolo a la vez a la misma interfaz. Cuando la puerta de enlace de servicio remoto está conectada, los protocolos Modbus y Bacnet no estarán disponibles en el puerto RS-485. Utilice un puerto Ethernet para la integración de BMS.

3.2. Programación de las salidas digitales (discretas)

Se pueden asignar advertencias y errores personalizados a las salidas digitales (discretas) sin potencial. Si se asigna más de un error a la misma salida, esta se activará cuando alguno de los errores asignados esté activo para esa salida.

La configuración de los errores se lleva a cabo desde el menú de Flextronic:

	<p>Alarmas</p>	<p>Asignar los mensajes de alarma a las salidas sin potencial</p>	
---	----------------	---	---

4. Tabla de asignación de Modbus

4.1 Flamcomat

Register	Access	Name	Type	Unit	Range
0x0001	R	Current working pressure	UINT16	cbar	0..16000
0x0002	R	Current vessel level	UINT16	%	0...100
0x0003	R	Outputs state (1-on)	UINT16		Bit 0: P35 M1 Active (pump/compressor) Bit 1: P36 M2 Active (pump/compressor) Bit 2: P33 V1 active (Valve 1) Bit 3: P34 V2 active (Valve 2) Bit 4: P31 V3 Active (Valve 3/ Refill pump) Bit 8: Degassing On (Enabled)* Bit 9: Degassing mode (0-normal, 1-turbo)*
0x0004	R	Error table 1 1-error active}	UINT16		Bit 0: Single pump/ compressor maximum run time error Bit 1: Redundant pumps/ compressor maximum run time error Bit 2: Load dependant pumps/ compressor maximum run time error Bit 3: Single pump/ compressor current error Bit 4: Pump A current error (double pump/ compressor configuration) Bit 5: Pump B current error (doublepump/ compressor configuration) Bit 6: Pumps A and B current error (double pump/ compressor configuration) Bit 7: Pump C/ compressor current error Bit 8: Self-learning valve correction error Bit 9: Self-learning pump correction error Bit 10: Pressure sensor current exceeded Bit 11: Pressure sensor no current Bit 12: Load cell current exceeded Bit 13: Load cell no current Bit 14: Pump A/ compressor power consumption too high Bit 15: Pump B/ compressor power consumption too high
0x0005	R	Error table 2 1-error active}	UINT16		Bit 0: Pump C power consumption too high Bit 1: Maximum Runtime P35 M1 exeeded Bit 2: Maximum Runtime P36 M2 exeeded Bit 3: Maximum supplation threaded water amount exceeded Bit 4: Pump running, no decrease of water level in vessel* Bit 5: Valve open, no increase of water level in vessel* Bit 6: Maximum runtime P33 V1 exeeded Bit 7: Maximum runtime P34 V2 exeeded Bit 8: To run quick fill* Bit 9: To run system fill* Bit 10: System run in auto mode Bit 11: Quick system filling active, V to stop* Bit 12: System filling active, V to stop* Bit 13: Manual mode active, press V to start automat Bit 14: Diaphragm rupture Bit 15: Spare

Register	Access	Name	Type	Unit	Range
0x0006	R	Error table 3 (1-error active)	UINT16		Bit 0: Water level increase in vessel without Flamcomat activity* Bit 1: Water level decrease in vessel without Flamcomat activity* Bit 2: Maintenance 1 is due Bit 3: Initial fill failed Bit 4: Maximum refill time exceeded Bit 5: Maximum drain time exceeded* Bit 6: No refill flow Bit 7: Amount refill water too much Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Initial fill active Bit 12: Manual initial fill active Bit 13: System fill timer expired Bit 14: Quick fill timer expired* Bit 15: Maintenance 2 is due
0x0007	R	Error table 4 (1-error active)	UINT16		Bit 0: Maintenance 3 is due Bit 1: Maintenance 4 is due Bit 2: Spare Bit 3: Spare Bit 4: Spare Bit 5: Spare Bit 6: Spare Bit 7: Spare Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Spare Bit 12: Spare Bit 13: Spare Bit 14: Spare Bit 15: Spare
0x0008	R	Operational hours total	UINT16	hours	
0x0009	R	Availability (0 - No, 1 - Yes)	UINT16		Bit 0: P35 M1 pressure increase Bit 1: P36 M2 Pressure increase Bit 2: P33 V1 (pressure decrease/ compressor valve) Bit 3: P34 V2 (pressure decrease/ compressor valve) Bit 4: P31 V3 (filling pump/ valve) Bit 8: Minimum pressure limiter Bit 9: Diaphragm rupture sensor Bit 10: Maximum temperature sensor
0x000A	R	Pressure setpoint	UINT16	cbar	0..16000
0x000B	R	Minimum water level (absolute)	UINT16	%	
0x000C	R	Level refeeding On (absolute)	UINT16	%	
0x000D	R	Level refeeding Off (absolute)	UINT16	%	
0x000E	R	Minimum level alarm limit	UINT16	%	
0x000F	R	Maximum level alarm limit	UINT16	%	
0x0010	R	Nominal volume of vessel	UINT16	l	
0x0011	R	Operational mode	UINT16		0 - single mode, 1 - redundant mode 2 - load-dependent
0x0012	R	Total refill liters	UINT16	l	
0x0013	R	Total refill minutes	UINT16	minute	

* Not applicable for the Flamcomat MK-U G4

4.2 FlexFiller

Register	Access	Name	Type	Unit	Formatting
0x0000	R	SystemPressure	U16	mbar	Decimal
0x0001	R	SupplyPressure	U16	mbar	Decimal
0x0002	R	TankLevel	U16	%	Decimal
0x0003	R	VacuumPressure	U16	mbar	Decimal
0x000A	R	PressureSetpoint	U16	mbar	Decimal
0x000B	R	SafetyValveSetting	U16	mbar	Decimal
0x000C	R	Calculated_LowPressureAlarm	U16	mbar	Decimal
0x000D	R	Calculated_HighPressureAlarm	U16	mbar	Decimal
0x000E	R	VesselVolume	U16	l	Decimal
0x0030	R	DigitalInput	U16	Binary	NA
0x0031	R	DigitalOutput	U16	Binary	Bit 0: P36 (Pump 2 / NC) Bit 1: P35 (Pump 1 / Direct drain valve) Bit 2: P34 (NC) Bit 3: P33 (NC) Bit 4: P32 (NC) Bit 5: P31 (Refill / Inlet valve) Bit 6: P29 (VFC 1) Bit 7: P28 (VFC 2) Bit 8: P27 (VFC 3)
0x0032	R	AccessoryPresenceMask	U16	Binary	NA
0x0033	R	AccessoryPresenceMask	U16	Binary	NA
0x0034	R	DaysToTheNextMaintenance1	U16	count	Decimal
0x0035	R	DaysToTheNextMaintenance2	U16	count	Decimal
0x0036	R	DaysToTheNextMaintenance3	U16	count	Decimal
0x0037	R	DaysToTheNextMaintenance4	U16	count	Decimal
0x0040	R	Errors_3	U16	Binary	NA (For Future Use)
0x0041	R	Errors_2	U16	Binary	NA (For Future Use)
0x0042	R	Errors_1	U16	Binary	NA (For Future Use)
0x0043	R	Errors_0	U16	Binary	Bit 0: ALR_SYSTEM_PRESSURE_LOW Bit 1: ALR_SYSTEM_PRESSURE_BELOW_MINIMUM Bit 2: ALR_SYSTEM_PRESSURE_SENSOR_OOB_LOW Bit 3: ALR_SYSTEM_PRESSURE_SENSOR_OOB_HIGH Bit 4: ALR_SYSTEM_PRESSURE_HIGH Bit 5: ALR_SYSTEM_FILL_TIMER_EXPIRED Bit 6: ALR_SAFETY_VALVE_ACTIVE Bit 7: ALR_VESSEL_PRECHARGE_LOST Bit 8: ALR_PUMP_1_OVER_CURRENT Bit 9: ALR_PUMP_2_OVER_CURRENT Bit 10: ALR_PUMP_1_NO_CURRENT Bit 11: ALR_PUMP_2_NO_CURRENT
0x0044	R	Warnings_0	U16	Binary	NA (For Future Use)
0x0045	R	Warnings_1	U16	Binary	Bit 0: WRN_SYPHON_FLUSH_DETECTED

0x0046	R	Warnings_2	U16	Binary	Bit 0: WRN_SYSTEM_FILL_ACTIVE Bit 1: WRN_SYSTEM_FILL_ON_HOLD Bit 2: WRN_ANTI_LEGIONELLA_RUNNING Bit 3: WRN_DEVICE_REBOOT Bit 4: WRN_TANK_LEVEL_SENSOR_OOB_LOW Bit 5: WRN_TANK_LEVEL_SENSOR_OOB_HIGH Bit 6: WRN_PUMP_DRY_RUN Bit 7: WRN_TANK_OVERFLOW Bit 8: WRN_MANUAL_SYSTEM_FILL Bit 9: WRN_PUMP_1_RUNTIME Bit 10: WRN_PUMP_2_RUNTIME Bit 11: WRN_ANTI_LEGIONELLA_RECOVERY Bit 12: WRN_VACUUM_PRESSURE_SENSOR_OOB_LOW Bit 13: WRN_VACUUM_PRESSURE_SENSOR_OOB_HIGH Bit 14: WRN_FILTER_FULL Bit 15: WRN_VACUUM_ERROR
0x0047	R	Warnings_3	U16	Binary	Bit 0: WRN_SYSTEM_PRESSURE_HIGH Bit 1: WRN_MAX_AMOUNT_TOPUP_WATER Bit 2: WRN_SYSTEM_PRESSURE_LOW Bit 3: WRN_NUMBER_OF_TOPUPS Bit 4: WRN_SUPPLY_PRESSURE_TOO_LOW Bit 5: WRN_SUPPLY_PRESSURE_TOO_HIGH Bit 6: WRN_SUPPLY_PRESSURE_SENSOR_OOB_LOW Bit 7: WRN_SUPPLY_PRESSURE_SENSOR_OOB_HIGH Bit 8: WRN_SYSTEM_FILL_SELF_LEARNING Bit 9: WRN_MANUAL_MODE Bit 10: WRN_MAXIMUM_TOPUP_TIME_EXCEEDED Bit 11: WRN_NO_TOPUP_FLOW Bit 12: WRN_MAINTENANCE_1_DUE Bit 13: WRN_MAINTENANCE_2_DUE Bit 14: WRN_MAINTENANCE_3_DUE Bit 15: WRN_MAINTENANCE_4_DUE
0x0050	R	OverallRuntime_H	U16	h	Decimal (Combine 0x0050&0x0051 to read the full U32 value)
0x0051	R	OverallRuntime_L	U16	h	Decimal (Combine 0x0050&0x0051 to read the full U32 value)
0x0052	R	TotalFilledVolume_H	U16	ml	Decimal (Combine 0x0052&0x0053 to read the full U32 value)
0x0053	R	TotalFilledVolume_L	U16	ml	Decimal (Combine 0x0052&0x0053 to read the full U32 value)
0x0054	R	TotalFillTime_H	U16	s	Decimal (Combine 0x0054&0x0055 to read the full U32 value)
0x0055	R	TotalFillTime_L	U16	s	Decimal (Combine 0x0054&0x0055 to read the full U32 value)
0x0056	R	ActivationsMv1_H	U16	count	Decimal (Combine 0x0056&0x0057 to read the full U32 value)
0x0057	R	ActivationsMv1_L	U16	count	Decimal (Combine 0x0056&0x0057 to read the full U32 value)
0x0058	R	ActivationsMv2_H	U16	count	Decimal (Combine 0x0058&0x0059 to read the full U32 value)
0x0059	R	ActivationsMv2_L	U16	count	Decimal (Combine 0x0058&0x0059 to read the full U32 value)
0x005A	R	RuntimeMv1_H	U16	s	Decimal (Combine 0x005A&0x005B to read the full U32 value)
0x005B	R	RuntimeMv1_L	U16	s	Decimal (Combine 0x005A&0x005B to read the full U32 value)
0x005C	R	RuntimeMv2_H	U16	s	Decimal (Combine 0x005C&0x005D to read the full U32 value)
0x005D	R	RuntimeMv2_L	U16	s	Decimal (Combine 0x005C&0x005D to read the full U32 value)
0x005E	R	ActivationsPump1_H	U16	count	Decimal (Combine 0x005E&0x005F to read the full U32 value)
0x005F	R	ActivationsPump1_L	U16	count	Decimal (Combine 0x005E&0x005F to read the full U32 value)
0x0060	R	ActivationsPump2_H	U16	count	Decimal (Combine 0x0060&0x0061 to read the full U32 value)
0x0061	R	ActivationsPump2_L	U16	count	Decimal (Combine 0x0060&0x0061 to read the full U32 value)
0x0062	R	ActivationsValve1_H	U16	count	Decimal (Combine 0x0062&0x0063 to read the full U32 value)
0x0063	R	ActivationsValve1_L	U16	count	Decimal (Combine 0x0062&0x0063 to read the full U32 value)
0x0064	R	RuntimePump1_H	U16	s	Decimal (Combine 0x0064&0x0065 to read the full U32 value)
0x0065	R	RuntimePump1_L	U16	s	Decimal (Combine 0x0064&0x0065 to read the full U32 value)

0x0066	R	RuntimePump2_H	U16	s	Decimal (Combine 0x0066&0x0067 to read the full U32 value)
0x0067	R	RuntimePump2_L	U16	s	Decimal (Combine 0x0066&0x0067 to read the full U32 value)
0x0068	R	RuntimeValve1_H	U16	s	Decimal (Combine 0x0068&0x0069 to read the full U32 value)
0x0069	R	RuntimeValve1_L	U16	s	Decimal (Combine 0x0068&0x0069 to read the full U32 value)
0x006A	R	NrOfNormalTopUps_H	U16	count	Decimal (Combine 0x006A&0x006B to read the full U32 value)
0x006B	R	NrOfNormalTopUps_L	U16	count	Decimal (Combine 0x006A&0x006B to read the full U32 value)
0x006C	R	NrOfEmergencyStops_H	U16	count	Decimal (Combine 0x006C&0x006D to read the full U32 value)
0x006D	R	NrOfEmergencyStops_L	U16	count	Decimal (Combine 0x006C&0x006D to read the full U32 value)
0x006E	R	SafetyValveActivations_H	U16	count	Decimal (Combine 0x006E&0x006F to read the full U32 value)
0x006F	R	SafetyValveActivations_L	U16	count	Decimal (Combine 0x006E&0x006F to read the full U32 value)
0x0070	R	ActivationsVfc1_H	U16	count	Decimal (Combine 0x0070&0x0071 to read the full U32 value)
0x0071	R	ActivationsVfc1_L	U16	count	Decimal (Combine 0x0070&0x0071 to read the full U32 value)
0x0072	R	ActivationsVfc2_H	U16	count	Decimal (Combine 0x0072&0x0073 to read the full U32 value)
0x0073	R	ActivationsVfc2_L	U16	count	Decimal (Combine 0x0072&0x0073 to read the full U32 value)
0x0074	R	ActivationsVfc3_H	U16	count	Decimal (Combine 0x0074&0x0075 to read the full U32 value)
0x0075	R	ActivationsVfc3_L	U16	count	Decimal (Combine 0x0074&0x0075 to read the full U32 value)

5. Tabla de asignación de Bacnet

5.1 Flamcomat

Object identifier	Access	Object Name	Type	Unit	Range
OBJECT_ANALOG_VALUE:0	R	Current working pressure	UINT16	cbar	0..16000
OBJECT_ANALOG_VALUE:1	R	Current vessel level	UINT16	%	0...100
OBJECT_ANALOG_VALUE:2	R	Outputs state (1-on)	UINT16		Bit 0: P35 M1 active (pump/ compressor) Bit 1: P36 M2 active (pump/ compressor) Bit 2: P33 V1 active (valve 1) Bit 3: P34 V2 active (valve 2) Bit 4: P31 V3 active (valve 3) Bit 8: Degassing On (Enabled)* Bit 9: Degassing mode (0-normal, 1-turbo)*
OBJECT_ANALOG_VALUE:3	R	Error table 1 (1-error active)	UINT16		Bit 0: Single pump/ compressor maximum run time error Bit 1: Redundant pumps/ compressor maximum run time error Bit 2: Load dependent pumps/ compressor maximum run time error Bit 3: Single pump/compressor current error Bit 4: Pump A current error (double pump/ compressor configuration) Bit 5: Pump B current error (double pump/ compressor configuration) Bit 6: Pumps A and B/ compressor current error (double pump c configuration) Bit 7: Pump C/ compressor current error Bit 8: Self-learning valve correction error Bit 9: Self-learning pump/ compressor correction error Bit 10: Pressure sensor current exceeded Bit 11: Pressure sensor no current Bit 12: Load cell current exceeded Bit 13: Load cell no current Bit 14: Pump A/ compressor power consumption too high Bit 15: Pump B/ compressor power consumption too high
OBJECT_ANALOG_VALUE:4	R	Error table 2 (1-error active)	UINT16		Bit 0: Pump C/ compressor power consumption too high Bit 1: Maximum runtime P35 M1 exeeded Bit 2: Maximum runtime P36 M2 exeeded Bit 3: Maximum supplation threaded water amount exceeded Bit 4: Pump/ compressor running, no decrease of water level in vessel Bit 5: Valve open, no increase of water level in vessel Bit 6: Maximum runtime P33 V1 exeeded Bit 7: Maximum runtime P34 V2 exeeded Bit 8: To run quick fill* Bit 9: To run system fill* Bit 10: System run in auto mode Bit 11: Quick system filling active, V to stop* Bit 12: System filling active, V to stop* Bit 13: Manual mode active, press V to start automat Bit 14: Diaphragm rupture Bit 15: Spare

Object identifier	Access	Object Name	Type	Unit	Range
OBJECT_ANALOG_VALUE:5	R	Error table 3 (1-error active)	UINT16		Bit 0: Water level increase in vessel without Flamcomat activity* Bit 1: Water level decrease in vessel without Flamcomat activity* Bit 2: Maintenance 1 is due Bit 3: Initial fill failed Bit 4: Maximum refill time exceeded Bit 5: Maximum drain time exceeded* Bit 6: No refill flow Bit 7: Amount refill water too much Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Initial fill active Bit 12: Manual initial fill active Bit 13: System fill timer expired* Bit 14: Quick fill timer expired* Bit 15: Maintenance 2 is due
OBJECT_ANALOG_VALUE:6	R	Error table 4 (1-error active)	UINT16		Bit 0: Maintenance 3 is due Bit 1: Maintenance 4 is due Bit 2: Spare Bit 3: Spare Bit 4: Spare Bit 5: Spare Bit 6: Spare Bit 7: Spare Bit 8: Spare Bit 9: Spare Bit 10: Spare Bit 11: Spare Bit 12: Spare Bit 13: Spare Bit 14: Spare Bit 15: Spare
OBJECT_ANALOG_VALUE:7	R	Operational hours total	UINT16	hours	
OBJECT_ANALOG_VALUE:8	R	Availability (0 - No, 1 - Yes)	UINT16		Bit 0: P35 M1 pressure increase Bit 1: P36 M2 Pressure increase Bit 2: P33 V1 (pressure decrease/ compressor valve) Bit 3: P34 V2 (pressure decrease/ compressor valve) Bit 4: P31 V3 (filling pump/ valve) Bit 8: Minimum pressure limiter Bit 9: Diaphragm rupture sensor Bit 10: Maximum temperature sensor
OBJECT_ANALOG_VALUE:9	R	Pressure setpoint	UINT16	cbar	0..16000
OBJECT_ANALOG_VALUE:10	R	Minimum water level (absolute)	UINT16	%	
OBJECT_ANALOG_VALUE:11	R	Level refeeding On (absolute)	UINT16	%	
OBJECT_ANALOG_VALUE:12	R	Level refeeding Off (absolute)	UINT16	%	
OBJECT_ANALOG_VALUE:13	R	Minimum level alarm limit	UINT16	%	
OBJECT_ANALOG_VALUE:14	R	Maximum level alarm limit	UINT16	%	
OBJECT_ANALOG_VALUE:15	R	Nominal volume of vessel	UINT16	l	
OBJECT_ANALOG_VALUE:16	R	Operational mode	UINT16		0 - single mode, 1 - redundant mode 2 - load-dependent
OBJECT_ANALOG_VALUE:17	R	Total refill liters	UINT16	l	
OBJECT_ANALOG_VALUE:18	R	Total refill minutes	UINT16	minute	

* Not applicable for the Flamcomat MK-U G4

5.2 FlexFiller

Object ID	Access	Oject name	Type	Unit	Formatting
OBJECT_ANALOG_VALUE:0	R	"alarms"	U64	Binary	Bit 0: ALR_SYSTEM_PRESSURE_LOW Bit 1: ALR_SYSTEM_PRESSURE_BELOW_MINIMUM Bit 2: ALR_SYSTEM_PRESSURE_BELOW_MINIMUM Bit 3: ALR_SYSTEM_PRESSURE_SENSOR_OOB_HIGH Bit 4: ALR_SYSTEM_PRESSURE_HIGH Bit 5: ALR_SYSTEM_FILL_TIMER_EXPIRED Bit 6: ALR_SAFETY_VALVE_ACTIVE Bit 7: ALR_VESSEL_PRECHARGE_LOST Bit 8: ALR_PUMP_1_OVER_CURRENT Bit 9: ALR_PUMP_2_OVER_CURRENT Bit 10: ALR_PUMP_1_NO_CURRENT Bit 11: ALR_PUMP_2_NO_CURRENT
OBJECT_ANALOG_VALUE:1	R	"warnings"	U64	Binary	Bit 0: WRN_SYSTEM_PRESSURE_HIGH Bit 1: WRN_MAX_AMOUNT_TOPUP_WATER Bit 2: WRN_SYSTEM_PRESSURE_LOW Bit 3: WRN_NUMBER_OF_TOPUPS Bit 4: WRN_SUPPLY_PRESSURE_TOO_LOW Bit 5: WRN_SUPPLY_PRESSURE_TOO_HIGH Bit 6: WRN_SUPPLY_PRESSURE_SENSOR_OOB_LOW Bit 7: WRN_SUPPLY_PRESSURE_SENSOR_OOB_HIGH Bit 8: WRN_SYSTEM_FILL_SELF_LEARNING Bit 9: WRN_MANUAL_MODE Bit 10: WRN_MAXIMUM_TOPUP_TIME_EXCEEDED Bit 11: WRN_NO_TOPUP_FLOW Bit 12: WRN_MAINTENANCE_1_DUE Bit 13: WRN_MAINTENANCE_2_DUE Bit 14: WRN_MAINTENANCE_3_DUE Bit 15: WRN_MAINTENANCE_4_DUE Bit 16: WRN_SYSTEM_FILL_ACTIVE Bit 17: WRN_SYSTEM_FILL_ON_HOLD Bit 18: WRN_ANTI_LEGIONELLA_RUNNING Bit 19: WRN_DEVICE_REBOOT Bit 20: WRN_TANK_LEVEL_SENSOR_OOB_LOW Bit 21: WRN_TANK_LEVEL_SENSOR_OOB_HIGH Bit 22: WRN_PUMP_DRY_RUN Bit 23: WRN_TANK_OVERFLOW Bit 24: WRN_MANUAL_SYSTEM_FILL Bit 25: WRN_PUMP_1_RUNTIME Bit 26: WRN_PUMP_2_RUNTIME Bit 27: WRN_ANTI_LEGIONELLA_RECOVERY Bit 28: WRN_VACUUM_PRESSURE_SENSOR_OOB_LOW Bit 29: WRN_VACUUM_PRESSURE_SENSOR_OOB_HIGH Bit 30: WRN_FILTER_FULL Bit 31: WRN_VACUUM_ERROR Bit 32: WRN_SYPHON_FLUSH_DETECTED
OBJECT_ANALOG_VALUE:2	R	"current system pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:3	R	"current supply pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:4	R	"current tank level"	U16	%	Decimal
OBJECT_ANALOG_VALUE:5	R	"current vacuum pressure"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:6	R	"pressure setpoint"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:7	R	"safety valve setting"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:8	R	"low pressure alarm limit"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:9	R	"high pressure alarm limit"	U16	mbar	Decimal
OBJECT_ANALOG_VALUE:10	R	"vessel volume"	U16	l	Decimal
OBJECT_ANALOG_VALUE:11	R	"digital input"	U16	Binary	NA

OBJECT_ANALOG_VALUE:12	R	"digital output"	U16	Binary	Bit 0: P36 (Pump 2 / NC) Bit 1: P35 (Pump 1/MV1 topup valve) Bit 2: P34 (NC) Bit 3: P33 (NC) Bit 4: P32 (NC) Bit 5: P31 (Inlet valve/MV2 Drain Valve) Bit 6: P29 (VFC 1) Bit 7: P28 (VFC 2) Bit 8: P27 (VFC 3)
OBJECT_ANALOG_VALUE:13	R	"accessories"	U32	Binary	NA
OBJECT_ANALOG_VALUE:14	R	"days to next maintenance 1"	U16	count	Decimal
OBJECT_ANALOG_VALUE:15	R	"days to next maintenance 2"	U16	count	Decimal
OBJECT_ANALOG_VALUE:16	R	"days to next maintenance 3"	U16	count	Decimal
OBJECT_ANALOG_VALUE:17	R	"days to next maintenance 4"	U16	count	Decimal
OBJECT_ANALOG_VALUE:18	R	"overall runtime"	U32	h	Decimal
OBJECT_ANALOG_VALUE:19	R	"total filled volume"	U32	ml	Decimal
OBJECT_ANALOG_VALUE:20	R	"total fill time"	U32	s	Decimal
OBJECT_ANALOG_VALUE:21	R	"activations MV1"	U32	count	Decimal
OBJECT_ANALOG_VALUE:22	R	"activations MV2"	U32	count	Decimal
OBJECT_ANALOG_VALUE:23	R	"runtime MV1"	U32	s	Decimal
OBJECT_ANALOG_VALUE:24	R	"runtime MV2"	U32	s	Decimal
OBJECT_ANALOG_VALUE:25	R	"activations Pump1"	U32	count	Decimal
OBJECT_ANALOG_VALUE:26	R	"activations Pump2"	U32	count	Decimal
OBJECT_ANALOG_VALUE:27	R	"activations Valve1"	U32	count	Decimal
OBJECT_ANALOG_VALUE:28	R	"runtime Pump1"	U32	s	Decimal
OBJECT_ANALOG_VALUE:29	R	"runtime Pump2"	U32	s	Decimal
OBJECT_ANALOG_VALUE:30	R	"runtime Valve1"	U32	s	Decimal
OBJECT_ANALOG_VALUE:31	R	"nrOfNormalTopUps"	U32	count	Decimal
OBJECT_ANALOG_VALUE:32	R	"nrOfEmergencyStops"	U32	count	Decimal
OBJECT_ANALOG_VALUE:33	R	"safetyValveActivations"	U32	count	Decimal
OBJECT_ANALOG_VALUE:34	R	"activationsVfc1"	U32	count	Decimal
OBJECT_ANALOG_VALUE:35	R	"activationsVfc2"	U32	count	Decimal
OBJECT_ANALOG_VALUE:36	R	"activationsVfc3"	U32	count	Decimal

Contacto

Países Bajos
hydronic flow control
+31 36 520 62 300
info@flamcogroup.com
www.flamcogroup.com

Bélgica
hydronic flow control
+32 2 371 01 67
info@flamco.be

Dinamarca
Flamco Denmark
+45 44 94 02 07
info@flamco.dk

Francia
hydronic flow control
+33 4 78 78 16 00
info@flamco.fr

Hungría
Flamco Kft
+36 23 880981
info@flamco.hu

Federación Rusa
ООО „Майбес РУС“
+7 495 727 20 26
moscow@flamcogroup.ru

Suiza
Flamco AG
+41 41 854 30 50
info@flamco.ch

China
Flamco Heating Accessories
(Changshu) Ltd, Co.
+86 512 528 417 31
yecho@flamco.com.cn

Estonia
Flamco Baltic
+372 568 838 38
info@flamco.ee

Alemania
Meibes System-Technik GmbH
+49 342 927 130
info@meibes.com

Italia
Flamco Italy
+39 030 258 6005
flamco-italia@flamcogroup.com

Eslovaquia
Flamco SK s.r.o.
+421 475 634 043
info@meibes.sk

Emiratos Árabes Unidos
Flamco Middle East
+971 4 8819540
info@flamco-gulf.com

República Checa
Flamco CZ s.r.o.
+420 284 00 10 81
info@meibes.cz

Finlandia
Flamco Finland
+358 10 320 99 90
info@flamco.fi

Alemania
Flamco GmbH
+49 2104 80006 20
info@flamco.de

Polonia
Flamco Meibes Sp. z o.o.
+48 65 529 49 89
info@flamco.pl

Suecia
Flamco Sverige
+46 50 042 89 95
vvs@flamco.se

Reino Unido
Flamco Limited
+44 17 447 447 44
info@flamco.co.uk

Flamco B.V.
Fort Blauwkapel 1
1358 DB Almere
the Netherlands
+31 36 52 62 300
info@flamcogroup.com
www.flamcogroup.com

Copyright Flamco B.V., Almere (Países Bajos) Queda prohibida la reproducción o la publicación total o parcial de este documento sin el permiso explícito y la mención de la fuente. Los datos que aquí figuran solamente se aplican a los productos Flamco. Flamco B.V. no asumirá ninguna responsabilidad por el uso, la aplicación o la interpretación incorrectos de la información técnica. Flamco B.V. se reserva el derecho a realizar modificaciones técnicas.

man_flextronic_connectivity_guide_eng_2023-11